


SILICONE EDGE FABRIC INSTALLATION GUIDE

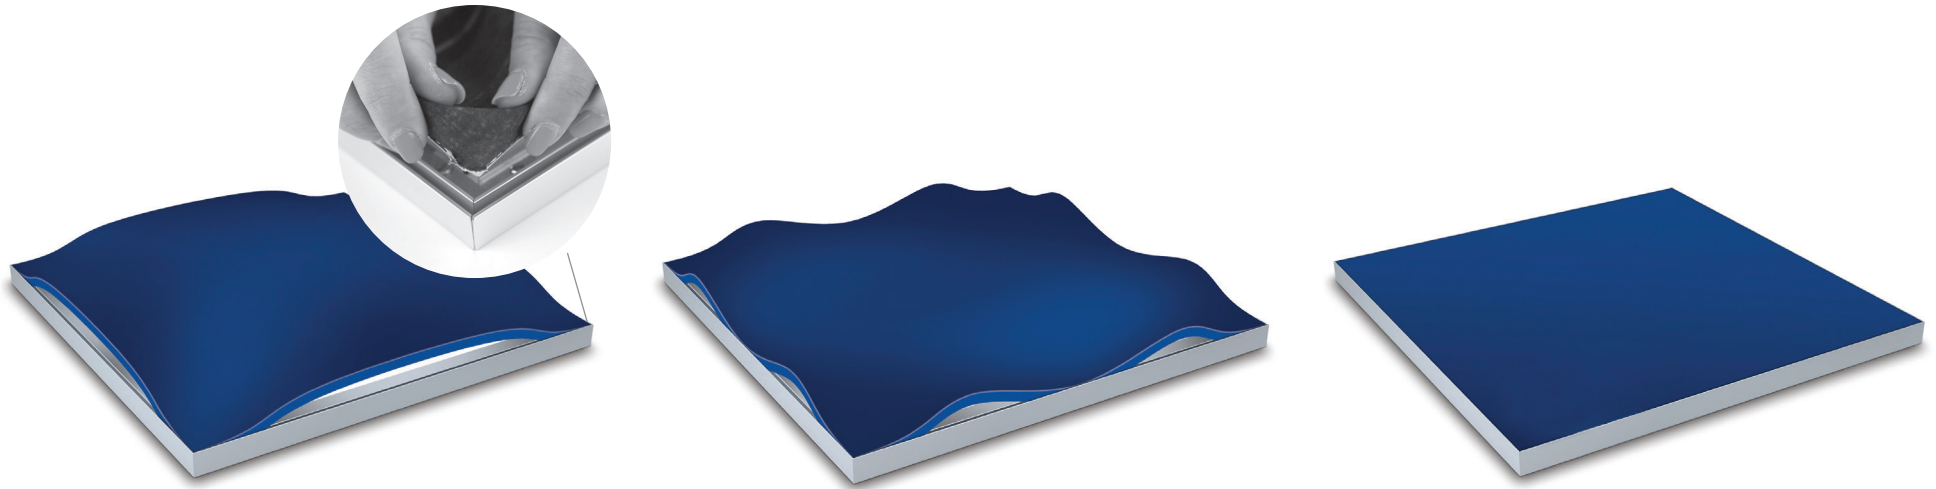

1 Start by folding one corner edge of the graphic so the silicone strip points down and the fabric wraps over it.

2 Insert one corner in and then the opposite diagonal corner. Then insert the next corner followed by the last diagonal corner.

3 Work from the middle on each side out, to the ends until the graphic is evenly taut in the frame.



Do NOT machine wash fabric. To clean, wipe with a damp lint free cloth.

Do NOT store tightly sealed or creased. Softly fold over original packaging material, or roll.

LEDCONN

— Be the FOCUS —

For any questions, please feel free to give us a call at 714 256 2111 or email us at sales@ledconn.com.

WWW.LEDCONN.COM

IG.21.01.R0